


NOTES

1. Remove existing coconut log stabilization
2. Excavate 3" minimum depth along areas to receive riprap
3. Place filter cloth on areas to receive riprap and extend 42" beyond edge of pond liner
4. Place 6" layer of riprap on filter cloth and extend 12 inch over pond liner
5. Wrap filter cloth over the top of the riprap as shown
6. Install 1/2" rebar at 12" spacing with 24" depth into ground along edge of pond liner
7. Install additional riprap on top of filter cloth wrap around for a 10 inch minimum filter cloth thickness
8. Perform miscellaneous grading around edge of riprap for blending the existing yard

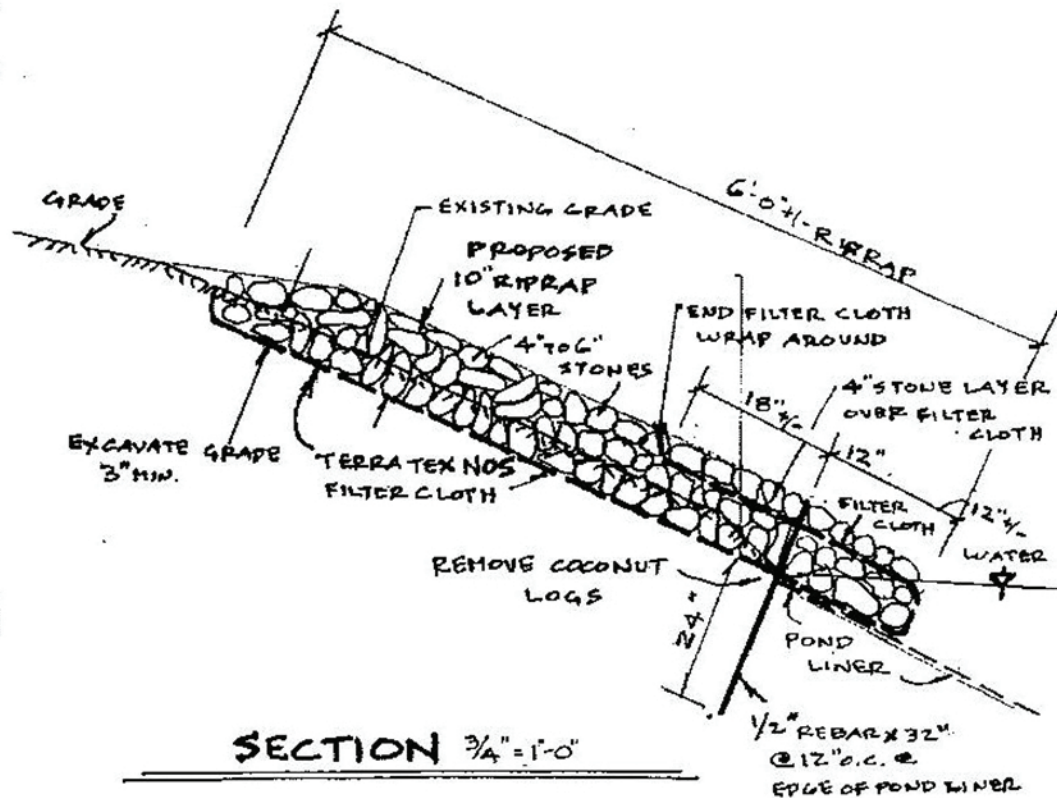

12/18/2012

SLOPE STABILIZATION  
 Jim Weikart  
 604 East Winslow Farm Road  
 Bloomington, IN 47401

KEVIN B. POTTER, P.E.  
 Professional Engineer  
 924 West 17<sup>th</sup> Street, #5  
 Bloomington, IN 47404

